 


**Components**

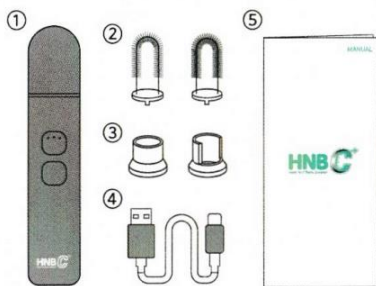

- ① HNBC Cleaner
- ② 1 x Hard Brush, 1 x Soft Brush
- ③ 2 x Adapters
- ④ C Type Cable
- ⑤ Manual + Warranty card

\* You can buy extra adapter and brushes

**Precautions for Use**

Please read the manual carefully before using the product to ensure safe and proper use.

- \* If you use a brush other than the dedicated brush for each model, it may cause a malfunction. In this case, it is not covered by A / S warranty.
- \* Do not use brushes combined without gender.
- \* Do not disassemble or repair the device yourself.
- \* Do not replace the battery arbitrarily.
- \* Please turn off the power after use.
- \* Do not connect wires or metallic objects to the charging terminal.
- \* Please keep out of reach of children.
- \* Keep your device away from water.

**Warranty terms**

 
**HNBC will provide repair or replacement under warranty according to the following terms and conditions.**

1. Warranty provides repair or replacement free of charge for defective eligible HNBC merchandise within 6 months of purchase by the end user.
2. This warranty may be void as a result of the following circumstances:
  - the customer does not provide this warranty card and the original receipt of purchase.
  - merchandise failure or damage is caused by improper use or unauthorized adjustments.
  - merchandise failure or damage as a result of excessive force or impact and non recommended operating conditions. (see user manual)
  - merchandise failure or damage by cause of water or other conducting liquids.
  - merchandise failure or damage by cause of usage with non-HNBC brand suggested components.
3. This warranty does not cover personal items or consumable goods and attachments, including but not limited to: mouthpiece, coil, glass, batteries, and USB cable.
4. This warranty does not cover any non-HNBC brand products even in case of their direct involvement.

For more information please consult our website [www.hnbc.co.kr](http://www.hnbc.co.kr)




**Name of Each Part**

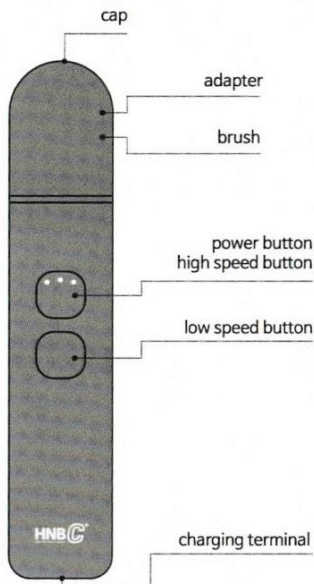

**ADAPTER**




 **BRUSH**



**POWER BUTTON - BATTERY LEVEL INDICATOR**

 \* Press the power button 5times in succession, turn the power on&off.

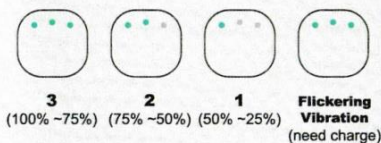

You can check the charging status of your device by pressing the operation button or connecting a cable.

**CHARGING TERMINAL**



Charge and use for the first time  
 Charging time:  
 Average 20 minutes  
 up to 40 minutes  
 (It may vary depending on the usage environment)

- \* It can be used as a mobile phone USB-C cable.
- \* It is recommended to charge frequently regardless of the remaining battery charge.

**How to Use**

