



size: 70x100 mm

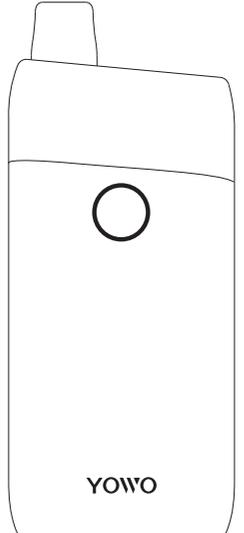

Production Structure >>

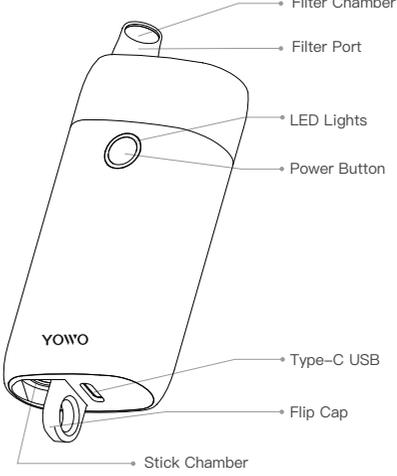

Specification >>


Model No. ----- YOWO
 Size ----- 105x46x25 mm
 Net Weight ----- 110g
 Battery Capacity ----- 3000 mAh
 Working Temperature ----- 0°C to 40°C
 Charging Voltage ----- 5V/2A
 Charging Port ----- Type-C
 Charging Time ----- 2.5 Hours
 Tobacco Stick ----- Ø7.8mm (King Size)
 Warrantly time ----- 6 months

Packing List

- YOWO Device * 1
- Instruction *1
- Brush * 1
- Type-C Charging Cable * 1
- Certification of Approval *1

How to Use >>

1) Insert the Cigarette:
 Break the Filter-tipped Cigarette → Insert the Tobacco Stick → Insert the Filter Tip

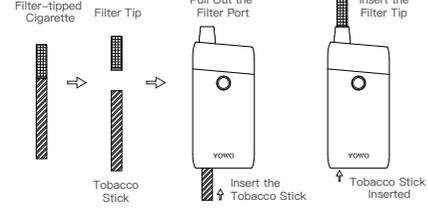


2) Startup & Shutdown

a. Startup:
 Long press the power button for 2 seconds, stop pressing when there is a vibrating alert, the preheating begins. In around 45 seconds when the 4 lights are on, the device vibrates again (twice), the preheating is completed and vaping is available.

| Indicator | 45s | 33s | 22s | 11s | Preheating Completed |
|--------------|-----|-----|-----|-----|----------------------|
| Waiting-time | 45s | 33s | 22s | 11s | Preheating Completed |


b. Shutdown:
 If you need to shut it down when the device is working, long press the power button for 2 seconds. The device vibrates once and all 4 lights go out, the forced shutdown is completed.

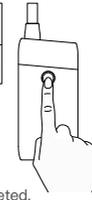

3) Vaping the Device:
 It's capable to vape the device for around 3 minutes and 30 seconds after the preheating is completed. When there are 20 seconds left for vaping, only 1 of the 4 lights is on. Then there is a vibrating alert, meaning the vaping is nearly done. When all the 4 lights go out, the device powers off.



4) Remove the Cigarette:
 Pull Out the Filter Tip → Open the Flip Cap and Remove the Tobacco Stick → Close the Flip Cap.

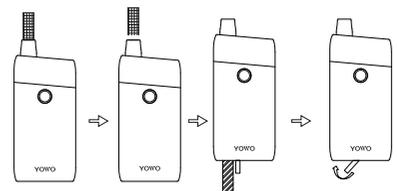

5) Consecutive Use
 When one use is completed, repeat the above four steps to continue more uses.

Battery Indication & Charging >>

○ Battery Indication
 When the device is standby, press the power button once (shorter than 2 seconds), the LED light indicates as below:

| Indicator | Battery |
|-------------------|-------------------|
| 4 Lights On | 75-100% |
| 3 Lights On | 50-75% |
| 2 Lights On | 25-50% |
| 1 Lights On | 5-25% |
| 1 Lights Flashing | Charging Required |

○ Charging
 The light continues flashing in the charging status, and all 4 lights are on when the charging is completed.

| Indicator | Battery Status |
|---------------------------------------|----------------|
| Light 1 Flashing | 0<25% |
| Light 1 On, Light 2 Flashing | 25-50% |
| Light 1 and 2 On, Light 3 Flashing | 50-75% |
| Light 1, 2 and 3 On, Light 4 Flashing | 75-95% |
| All Four Lights On | 100% |

Warning: Please charge the device with the standard 5V/2A adaptor.

Temperature Setting >>


There are 5 temperature grades. If the temperature grade is higher, the smoke is richer and the taste is thicker.


In the standby status, long press the power button for 8 seconds to enter the temperature setting mode. Judge the temperature grade by the present flashing light. Then press the button once to switch to the next grade. If the light flashes 3 times and then off, the temperature is set successfully.

| Temperature Grade | LED Light Indicator |
|-------------------|-----------------------------|
| Grade 1 | Light 1 flashes 3 times |
| Grade 2 | Light 2 flashes 3 times |
| Grade 3 | Light 3 flashes 3 times |
| Grade 4 | Light 4 flashes 3 times |
| Grade 5 | Light 1 and 2 flash 3 times |

Cleaning Tips >>

 - Make sure to cool the device for over 5 minutes before you clean the device.
- If there is tobacco residue inside the chamber after using it, pull out the filter port and open the flip cap on the device bottom, clean the residue with the brush.

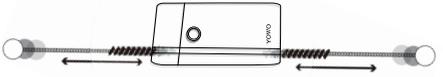

- It will be more effective to clean the chamber back and forth for 10 times from both the upper port and bottom port.
- We suggest cleaning the filter port after 5 consecutive uses: Pull out the filter port and immerse it into the warm water for 5 minutes. Take it out and dry it.
- Clean the brush: Clean the brush with pure water after you clean the device. Be sure the brush is clean and dry when you use it next time.
- How to remove and install the filter port:
 - Rotate the filter port clockwise to the end, and pull up the filter port. Then the removing is completed.
 - After the filter port is cleaned and dried, make the 2 mounts of filter port and the upper casing aligned, insert the filter port and rotate the filter port anticlockwise to the end. Then the installation is completed.

Security Features >>

- Overcurrent protection
 If the current is over 20A, the device stops working.
- Overcharging Protection
 If the charging voltage is over 4.2V, the device stops working.
- Low-voltage Protection
 If the battery is too low and light 1 flashes, the device stops working.
- Fault Protection
 If a fault happens to the device, LED lights flash 4 times and the device stops working. The general faults are as below:

| No. | Fault Indicator | Fault Cause |
|-----|---------------------------------|---|
| 1 | Light 1 and 2 flash for 4 times | The heating element is open-circuited. |
| 2 | Light 1 and 3 flash for 4 times | The heating element is short-circuited. |
| 3 | Light 1 and 4 flash for 4 times | The cell voltage is too high. |
| 4 | Light 2 and 3 flash for 4 times | The cell voltage is too low. |
| 5 | Light 2 and 4 flash for 4 times | The temperature is too high. |
| 6 | Light 3 and 4 flash for 4 times | The temperature is too low. |

Precautions >>

- Do not use this product for adolescents under 18 years, non-smokers, or lactating women, and those who are sensitive or allergic to nicotine.
- Please keep this product out of the reach of children.
- Do not place this product in water or at a high temperature.
- Do not turn the device on without cigarette inserted.
- Do not adjust its temperature grade in working status.
- Do not activate the heating function in charging status.
- Do not disassemble the damaged device personally and not use the device again if it's been disassembled.
- To avoid any damage, do use the matched brush to clean the device.
- Do not use one cigarette twice to avoid any combustion.
- Do stop using the device immediately if the casing comes off, the device does not work well, sparks or its temperature is abnormally high in charging status.
- Do not use this product in the non-smoking areas, such as gas stations and other inflammable and explosive places.
- Do not put the device in a place exposed to the sunshine for a long time or in a hot place such as a stove.
- Please dispose of this product according to the garbage classification, and pay attention to environmental protection.

• **Disclaimer**
 This product is a harm reduction product and cannot be guaranteed to be completely harmless. Please note that smoking is harmful to health.

• **Warranty**

- The warranty for this product is half a year.
- Warranty service will not be provided due to personal wrong operation or product damage caused by manual disassembly.
- The warranty service is only available to authorized merchants.
- Wearing parts (filter and brush, etc.) are not covered by the warranty.

* **The final interpretation and amendment rights of the above statement belong to the company.**