



KNB SOLID

用戶指引
User Guide
ユーザーガイド


K15

Plus+

1. 注意事項

- › 使用前請仔細閱讀此用戶指引；並請按照此指引使用本產品。
- › 本設備不適用於：未滿18歲的人群；兒童、孕婦；患有心臟病、高血壓、糖尿病、對尼古丁過敏或服用藥物治療抑鬱症、哮喘等群體。
- › 請將設備及組件放置於兒童及寵物接觸不到的地方。
- › 請常溫保存，切勿暴露設備於過熱或潮濕的地方。
- › 請勿將設備的任何部件或組件浸入水中。
- › 請勿在存有易燃物質、液體、氣體或放氧氣的地方使用該設備。
- › 請勿在充電過程中使用本設備。
- › 在清潔、打開或與內部加熱組件直接接觸前，必須確保機身已經冷卻。
- › 在使用過程中移除煙彈，請先關閉設備。
- › 本用戶指引中包含的注意事項不能涵蓋所有可能發生的情況。
- › 使用或維護設備時請小心謹慎，不要隨意改裝、拆開。
- › 請在0C-35C的環境溫度內使用、保存本設備。低溫或高溫環境可能會暫時縮短電池壽命，或導致設備損壞。

2. 產品結構 (附图)

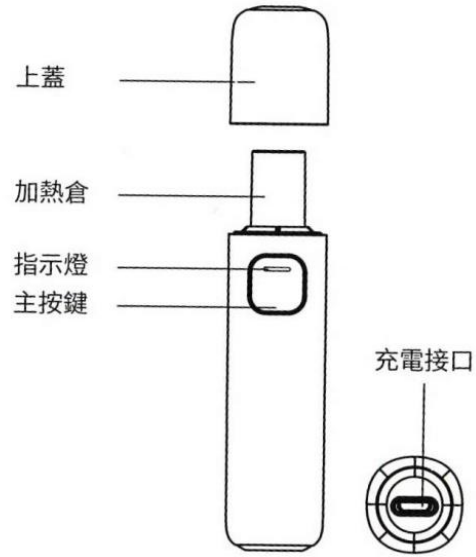

3. 產品規格參數

尺寸: 22.5*22.5*99.8mm
預熱時間: 10s
電池容量: 1200mah
工作溫度: 300C-400C
充電標準: Micro 5pin 5V/2A

重量: 50g
單次工作時間: 255s
循環工作: 12-15支

中文


中文

4. 操作說明

A 裝煙彈：將煙彈垂直插入。(附圖)



B 加熱：按住功能鍵2秒，機身震動，指示燈閃爍進入預熱狀態，機身第二次震動時，指示燈長亮，即可吸煙。機身第三次震動時，指示燈閃爍，提醒吸煙階段即將結束，使用過程中若需要關閉設備，請按住功能按鍵2秒，震動後關閉設備。(附圖片)

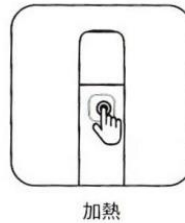

C 取煙彈：將煙彈轉三圈後取出，或將上蓋向上推取出煙彈。(附圖片)




4. 操作說明


D 電量查看：待機狀態下，短按功能按鍵，指示燈顏色表示當前電量。白燈100%-20%、綠燈5%-20%、橙色0%-5%。(附顏色圖示)



E 清潔：自動清潔：連續按功能按鍵五下，指示燈閃爍綠色，加熱針自動進行高溫清潔，設備震動指示燈熄滅時自動清潔完畢。

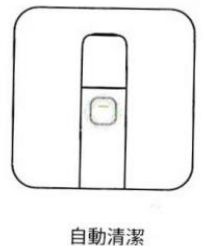

手動清潔：機器處於室溫狀態，取出上蓋，用棉簽即可清潔加熱倉及煙托。(建議每抽30支清潔一次)(附圖片)

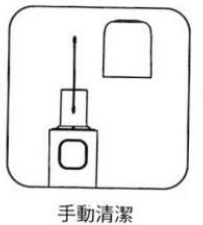


中文

中文

1. Notes

- > Please read this user guide carefully before use; and please use this product according to this guide.
- > This device is not suitable for: people under 18 years of age; children, pregnant women; people with heart disease, high blood pressure, diabetes, allergies to nicotine, or taking medications to treat depression, asthma, etc.
- > Keep the equipment and components out of the reach of children and pets.
- > Please store at room temperature, and do not expose the device to overheated or humid places.
- > Do not immerse any part or component of the equipment in water.
- > Do not use this equipment in the place where flammable substances, liquids, gases or oxygen are stored.
- > Do not use this device during charging.
- > Before cleaning, opening, or direct contact with the internal heating components, you must ensure that the fuselage has cooled down.
- > Remove the cartridge during use, please turn off the device first.
- > The precautions contained in this user guide cannot cover all possible situations. Please be careful when using or maintaining the equipment, do not modify or disassemble at will.
- > Please use and store the device in an ambient temperature of 0C-35C . A low or high temperature environment may temporarily shorten the battery life or cause damage to the device.

2. Product structure (with photos)

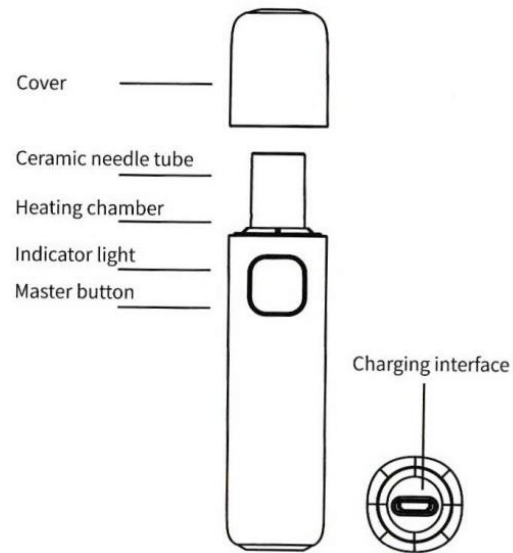


3. Product Specifications

Size: 22.5 * 22.5 * 99.8mm , preheating time: 10s , battery capacity: 1200mAh , working temperature: 300C-400C , the charging standard: Micro elgen - energy in 5V / . 2A , weight: 50g , a single working time 255s , the work cycle: 12-15 branch

4. Instructions

A. Load the cartridge: Insert the cartridge vertically. (With photos)

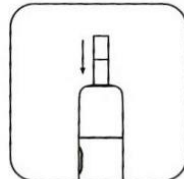


Load the cartridge

B. Heating: Press and hold the function key for 2 seconds, the body vibrates, the indicator light flashes into the preheating state, and the second time the body shakes, the indicator light stays on, and you can smoke. When the body shakes for the third time, the indicator light flashes to remind that the smoking phase is about to end. If you need to turn off the device during use, press and hold the function button for 2 seconds, and turn off the device after shaking. (With picture)



Heating


C. take the smoke bombs: after removing the smoke bombs it three times, or remove the cover pushes up the smoke bombs. (With picture)

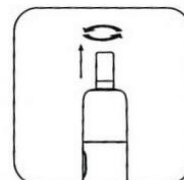

Take the smoke bombs

4. Instructions


D. Battery check: In standby mode, short press the function button, the indicator color indicates the current battery. White light 100% -20% , green light 5% -20% , orange 5% -0% . (With color icon)

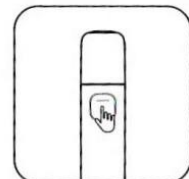

Battery check


○ White 20% -100% ● Green 5% -20% ● Orange 5% -0%

E. Cleaning: Automatic cleaning: Press the function button five times continuously, the indicator light flashes green, the heating needle automatically performs high-temperature cleaning, and the automatic cleaning is completed when the vibration indicator of the device goes out.

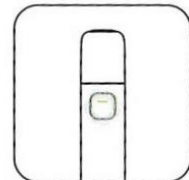

Automatic cleaning


Manual cleaning: The machine is at room temperature, remove the upper cover, and use a cotton swab to clean the heating chamber and the cigarette holder. (It is recommended to clean every 30 pumps) (with pictures)

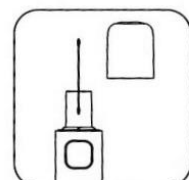

Manual cleaning

5. Charging

Connect the power adapter and start charging. The corresponding power color indicator flashes, and the fully charged indicator goes off. 0% -5% orange, 5% -20% green, 20% -100% white (indicated by color chart)

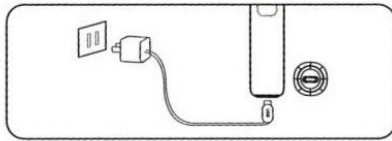

6. Frequently Asked Questions

6.1 The cartridge cannot be inserted into the device normally. Some of the tobacco from the previous cartridge may remain in the butt, please clean it. 6.2 The upper cover cannot be properly closed / stuck. Please check if the cigarette holder and the device are aligned. If the problem persists, please clean the device. 6.3 When the indicator light is not flashing normally, it cannot be used normally. It can be reset to restore the original settings. Press and hold the function button for six seconds to wait for the indicator light to go out and release the function button. The indicator light flashes white green orange and the device shakes to complete the operation and restore the factory settings. If it fails to resume normal use, it indicates that the device is faulty, please contact the dealer for repair. 6.4 The cartridge burns or feels hot, which may be related to the damp of the cartridge. Please store the cartridge in a dry environment.


1. 注意が必要な事項

- ›使用する前にこのユーザーガイドを注意深く読んでください;そしてこのガイドに従ってこの製品を使用してください。
- ›このデバイスは、18歳未満の人々、子供、妊娠中の女性、心臓病、高血圧、糖尿病、ニコチンアレルギーのある人、うつ病、喘息などの治療薬を服用している人には適していません。
- ›機器やコンポーネントを子供やペットの手の届かない場所に保管してください。
- ›室温で保管し、過熱した場所や湿度の高い場所にデバイスをさらさないでください。
- ›機器の一部または構成要素を水に浸さないでください。
- ›引火性物質、液体、気体、または酸素が保管されている場所でこの装置を使用しないでください。
- ›充電中はこのデバイスを使用しないでください。
- ›内部加熱部品を清掃、開放、または直接接触させる前に、胴体が冷却されていることを確認してください。›使用中にカートリッジを取り外し、最初にデバイスの電源を切ってください。
- ›このユーザーガイドに記載されている注意事項は、考えられるすべての状況をカバーできるわけではありません。機器を使用または保守するときは注意してください。自由に変更または分解しないでください。
- ›周囲温度0~35°Cでデバイスを使用して保管してください。低温または高温の環境では、バッテリーの寿命が一時的に短くなったり、デバイスが損傷したりする場合があります。

English 35

日本語 03

2. 製品構造 (写真付き)

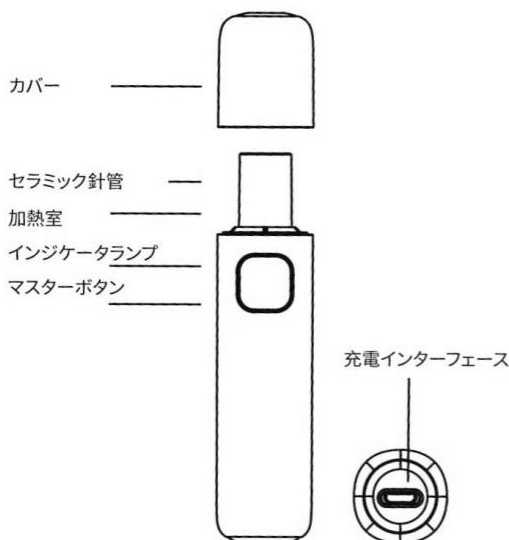


3. 製品規格参数

サイズ: 22.5 * 22.5 * 99.8mm、ウォームアップ時間: 10s、バッテリー容量: 1200mah、動作温度: 300C-400C、充電標準: Micro 5pin 5V / 2A、重量: 50g、シングル動作時間255s、サイクルワーク: 12-15


4. 取扱説明書

A. カートリッジをロードします: カートリッジを垂直に挿入します。(写真付き)

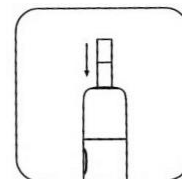


煙弾を挿入する

B. 加熱: ファンクションキーを2秒間押し続けると、本体が振動し、インジケータランプが点滅して予熱状態になり、2回目は本体が揺れ、インジケータランプが点灯したままになり、喫煙できます。身体が3回目に揺れると、インジケータランプが点滅し、喫煙段階が間もなく終了することを知らせます。(写真付き)

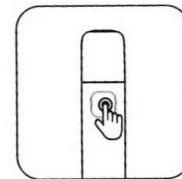

加熱

C. カートリッジを取り外す: カートリッジを3回回して取り外します。または、上部カバーを押し上げてカートリッジを取り外します。(写真付き)

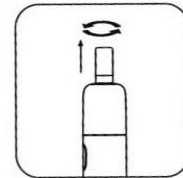


煙弾を取り除く

日本語 02

日本語 03

4.取扱説明書


D.バッテリーチェック:スタンバイモードでは、機能ボタンを短く押すと、インジケータの色が現在のバッテリーを示します。白色光100%-20%、緑色光5%-20%、オレンジ色0%-5%。(色アイコン付き)

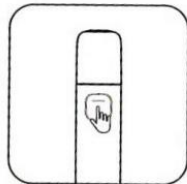

バッテリーチェック


○ 0%~20% 100% ● 5%~20% ● 0%~5%

E.クリーニング:自動クリーニング:機能ボタンを5回連続して押すと、インジケータライトが緑色に点滅し、加熱針が自動的に高温クリーニングを実行し、デバイスの振動インジケータが消えると自動クリーニングが完了します。

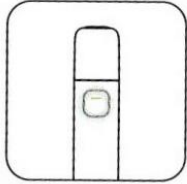

自動クリーニング

手動クリーニング:マシンは室温です。上部カバーを取り外し、綿棒を使用して加熱チャンバーとシガレットホルダーをクリーニングします。(30ポンプごとにクリーニングすることをお勧めします)(写真付き)

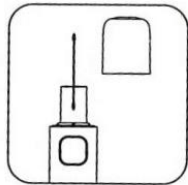


手動クリーニング

日本語 48

5.充電

電源アダプタを接続して充電を開始すると、対応する電源色インジケータが点滅し、完全に充電されたインジケータが消灯します。0%-5%オレンジ、5%-20%緑、20%-100%白(カラーマップで表示)

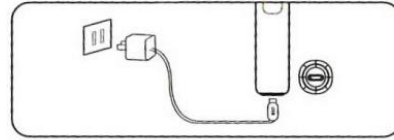

● オレンジ0%-5%
● 緑5%-20%
○ ホワイト20%-100%

6.よくある質問

6.1カートリッジをデバイスに適切に挿入できない以前のカートリッジのタバコの一部がお尻に残っている可能性があるため、クリーニングしてください。6.2上部カバーが適切に閉じられない/詰まることがないシガレットホルダーとデバイスが揃っていないかどうかを確認してください。問題が解決しない場合は、デバイスをクリーニングしてください。6.3インジケータランプは、異常に点滅すると正常に使用できなくなります。リセットして元の設定に戻すことができます。機能ボタンを6秒間押し続けて、インジケータライトが消えて機能ボタンを放します。通常の使用を再開できない場合は、デバイスに欠陥があることを示しています。修理については販売店にお問い合わせください。6.4カートリッジが燃えるか、熱く感じますが、これはカートリッジの湿気に関連している可能性があります。

日本語 49

KNB



Supervised by Centimeter oy Finland Pvt.Ltd
Manufactured by Minshen Technology (Shenzhen) Co.,Ltd